


**The problem:**  
**Not enough time!**  
You have to lay finish and burnish it tonight before traffic tomorrow. But how do you keep from powdering the finish if there isn't enough time to cure it?

**The Cure® solves that problem.**

- **It's Super-Soft**  
to keep from pulling the finish up.
- **It's Strong**  
to stand up under:  
Propane  
Cord Electric  
Battery
- **It's Flexible**  
to keep from burning uneven floors

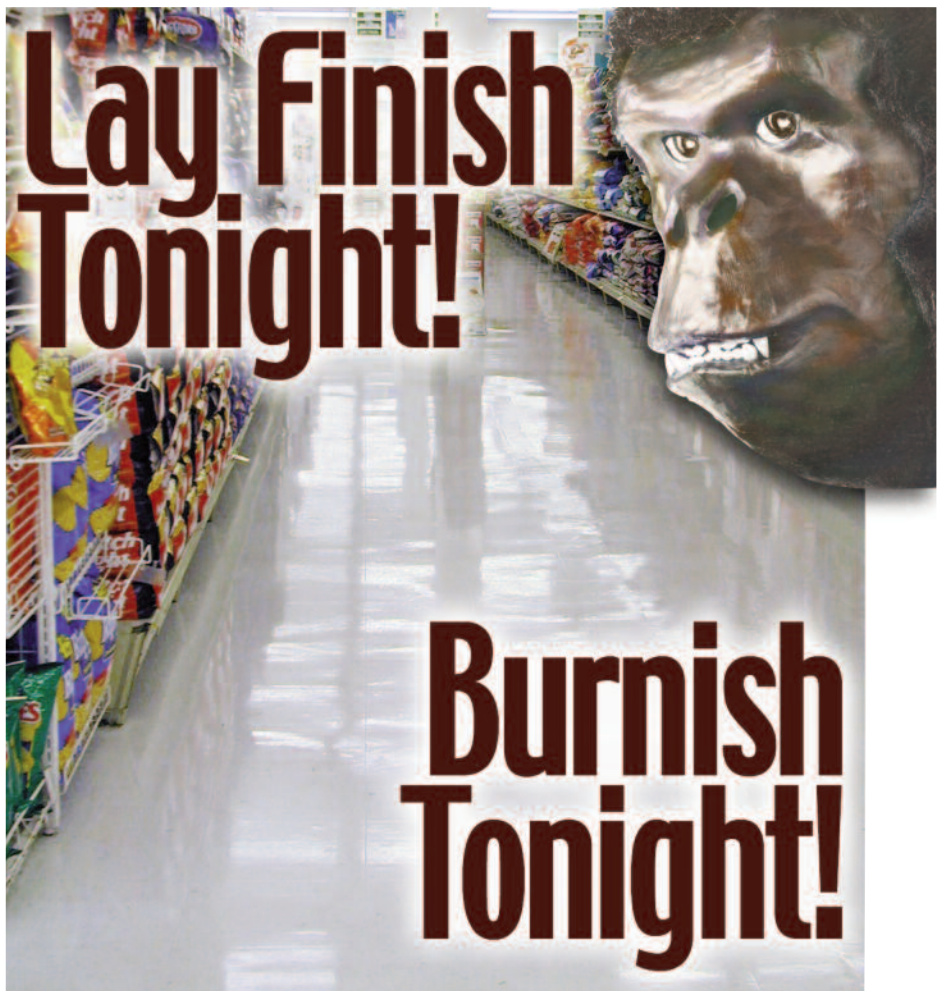

Other pads aren't soft enough to keep from powdering the finish. ETC's The Cure® fixes this problem with a pad made of Super-Soft fibers.

**The**  
**Cure®**  
SuperSoft Floor Machine Pad by ETC

**The 1st Step  
To Cure Your Problem Floor!**

Call our floor care specialist about  
any floor care problem.

**1-800-334-6651**  
**Fax 1-800-382-7237**



**etc.®**  
ETC of Henderson, Inc.


Uneven floors cause problems when they need burnishing. The high spots become burned from friction when a floor pad that is made for level surfaces is used.

ETC has The Cure for uneven floors.

The Cure® solves all these problems:

- **Burn Marks** with uneven floors
- **Powdering** on newly laid finish
- **Scratches** on newly laid finish and cures between layers of finish

The Cure® is used together with ETC's other fine high speed & ultra high speed floor pads- Gorilla®, Jaguar®, Gorilla Lite®, Aqua Plus®, Blue Jay® and Superspeed Rubberized.

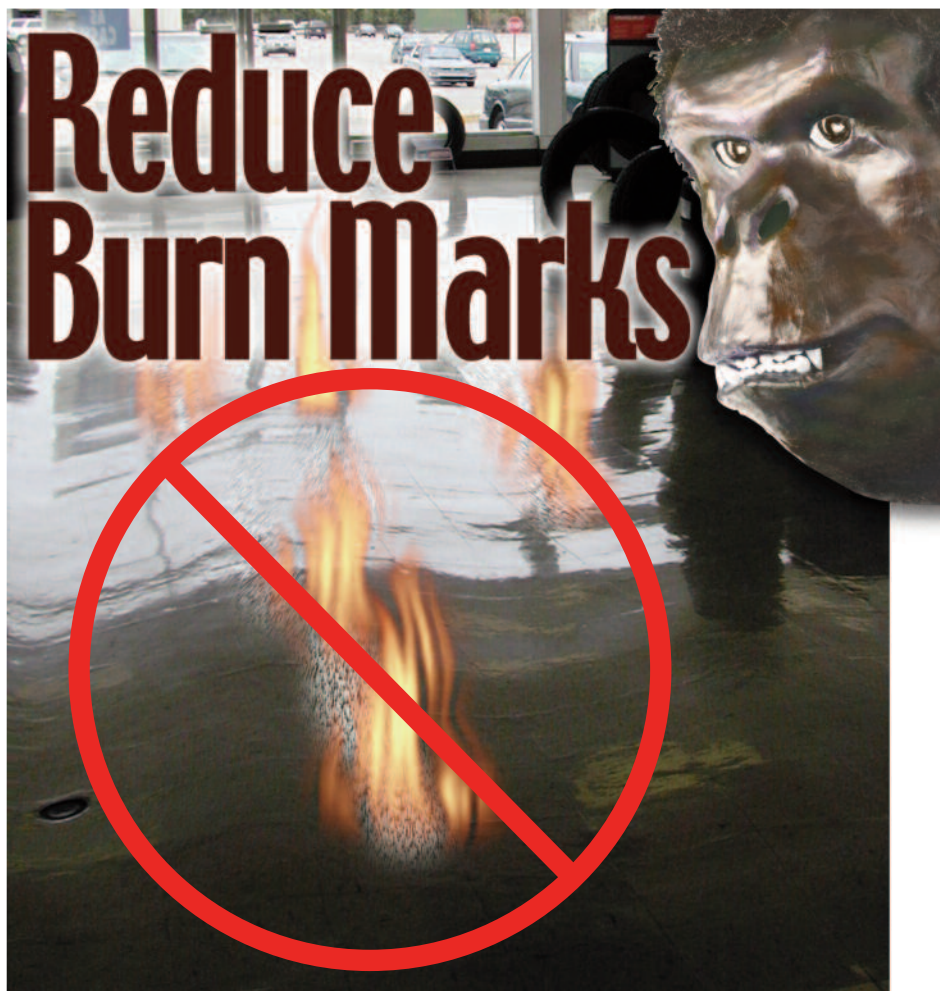

Other pads can leave burn marks on uneven floors. ETC's The Cure® fixes this problem with a pad made for uneven floors.



**The 1st Step  
To Cure Your Problem Floor!**

Call our floor care specialist about any floor care problem.

**1-800-334-6651**  
**Fax 1-800-382-7237**



**etc.**®  
ETC of Henderson, Inc.